



Table of Contents	
1.0 Introduction	4
1.1 Foreword	4
1.2 Package Contents	4
1.3 Warnings	4
1.4 Computer Requirements	5
1.5 Layout of the Player	6
Part I: Computer Operations	
2.0 Connecting and Charging the Player	8
2.1 Connecting and Disconnecting the Player from Your Computer	8
2.2 Charging the Battery	8
3.0 Video Conversion	
3.1 Installing Video Conversion Software	9
3.2 Converting Video	9
3.3 Using Other Conversion Software	11
3.4 Converting Video to Linux	11
4.0 Copying Files	12
4.1 Copying Media Files to your Player	12
4.2 Using Windows Media Player® Sync Function	13

Part II: Player Operations	
5.0 Basic Operations	16
5.1 Turning the Player On and Off	16
5.2 Mode Selector	16
5.3 Changing the Volume	17
6.0 Watching Videos	
6.1 Entering Move Mode	17
6.2 Video Playback	18
6.3 Movie Menu	19
7.0 Listening to Audio	
7.1 Enter Music Mode	20
7.2 Audio Playback	21
7.3 Audio Playback Menu	22
7.4 Audio File Menu	22
8.0 Viewing Pictures	
8.1 Entering Photo Mode	23
8.2 Picture Viewing Operations	23
8.3 Photo Menu	24
9.0 Recording Audio	
9.1 Entering Recorder Mode	24
9.2 Voice Recorder Operations	25

10.0 E-Book Operations	26
10.1 Entering E-Book Mode	26
10.2 Basic E-Book Operations	26
10.3 E-Book Menu	27
11.0 Listening to the FM Radio	
11.1 Radio Operations	28
11.2 FM Radio Menu	28
12.0 Device Settings	
13.0 Formatting the Player	31
13.1 Understanding File systems	31
13.2 Reformatting Your Player in Windows	31
14.0 Help	32
14.1 Troubleshooting	32
14.2 For More Help	33
15.0 Technical Specifications	34

1.0 Introduction	
1.1 Foreword	4
Thank you for purchasing this player. Please read this manual carefully before using the product. Specifications and software updates are subject to change without notice. The player pictured in this manual may differ from yours, but the information in this manual will still apply.	
Please visit our website for more information: www.ematic.us	
1.2 Package Contents	
Your player comes with the following items:	
• The player	
• A USB cable	
• A quick-start guide	
1.3 Warnings	
• Do not use the product in extreme temperatures, or dusty or wet environments.	
• Do not leave the product in direct sunlight.	
• Do not disconnect the player and USB from your computer without first ensuring a "safe removal", as this may damage the player. See pg. 8.	
• Do not open or disassemble the player, as this will void the warranty.	
• Handle the player with care to prevent physical damage.	
• Protect the player from static discharge.	

1.4 Computer Requirements	
Virtually any computer and operating system that is able to use USB storage devices can be used to copy files to and from the player. These include Windows®, Mac OS X®, and Linux®.	
The following, however, is required in order to use the included video conversion software:	
• Windows 2000/ME/XP/Vista	
• An 800MHz or faster CPU	
• USB port	
• CD-ROM drive	
• At least 50MB free hard disk space	

